Sound for Generations

CR9986

Dual Alarm CD Clock Radio

Please read this manual before use

...1
... 2-3
etting the time ...4
o ...5
...6
...6
...7
...8
...9
...9
...10
...10
...10
...11
me ...11
e ...11
...12
...12
...12
es ...13
ake to buzzer ...14
ake to radio ...15
Setting alarms to wake to CD ...16
Setting alarms to wake to CD programme ...17
Snooze control ...18
Sleep function ...18
Auto dimmer ...19
Headphones ...19
Specifications ...20
Circuit features ...20
General ...21
Guarantee ...22

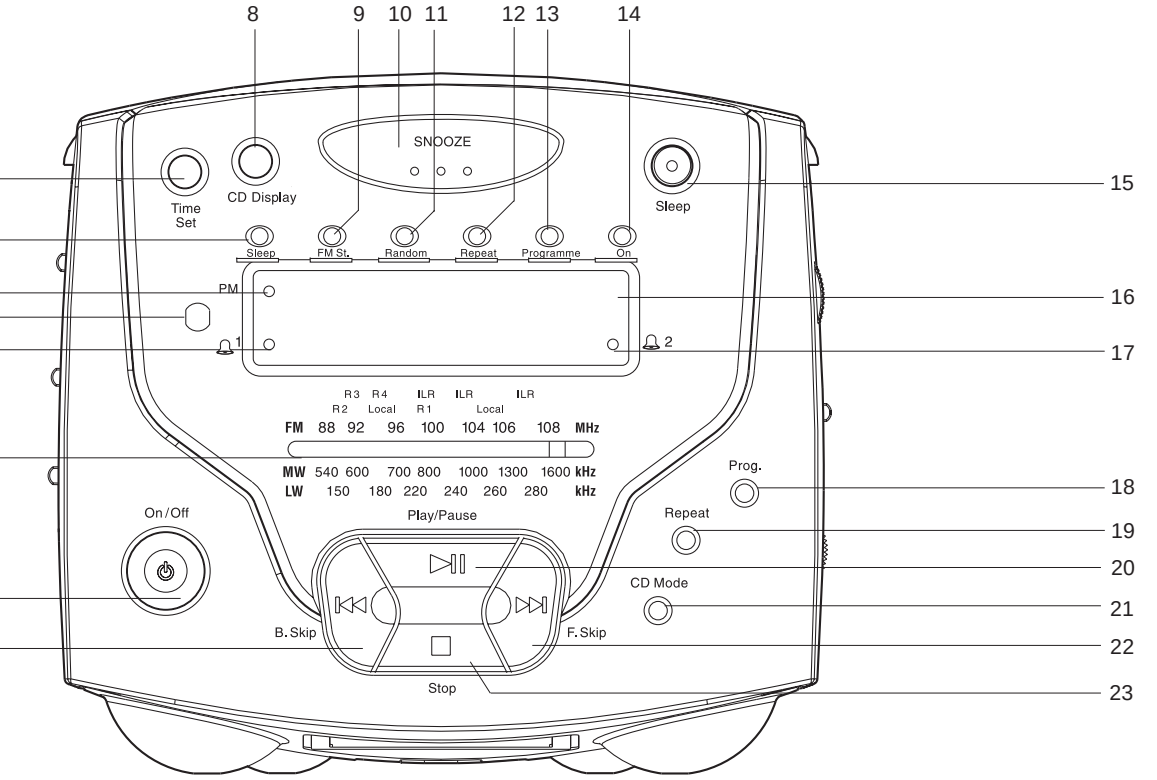

6. Sleep indicator
7. Time Set button
8. CD Display button
9. FM stereo indicator
10. Snooze button
11. Random indicator
12. Repeat indicator
13. Programme indicator
14. On indicator
15. Sleep button
16. CD/Clock Display
17. Alarm 2 indicator
18. Programme button
19. Repeat button
20. CD Play/Pause button
21. CD Mode button
22. F.Skip button
23. CD Stop button
24. B.Skip button

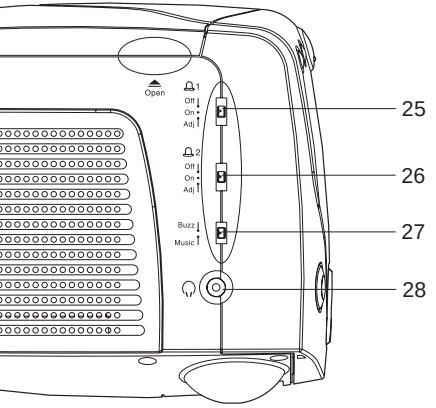

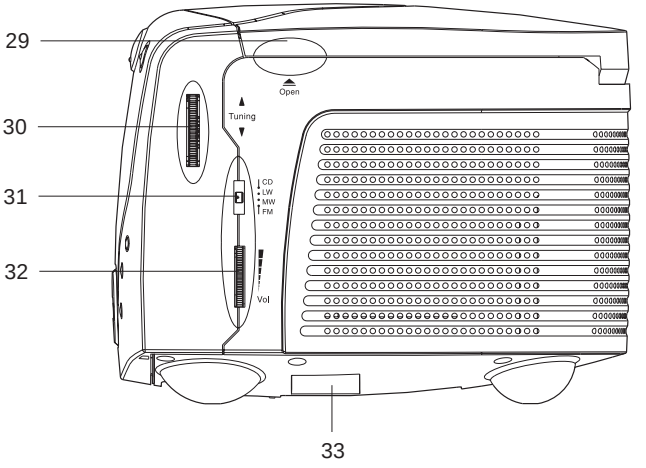

25. Alarm 1 function switch
26. Alarm 2 function switch
27. Alarm Mode switch
28. Headphone socket

29. CD Door handle
30. Tuning control
31. Function switch
32. Volume control
33. Battery compartment (on underside)

setting the time

lock radio you must first set the correct time.

at surface. Plug the mains lead into a wall socket
wall socket.

ill show 12:00. Ensure that the ***Alarm 1*** and
witches are set to the 'Off' position.

n the ***Time Set button***. The time will flash in

the ***Time Set button*** press the ***B.Skip button***
nd the ***F.Skip button*** to set the hour. Release
e correct time is reached. The clock uses a 12
PM indicator. Ensure that the correct 12 hour

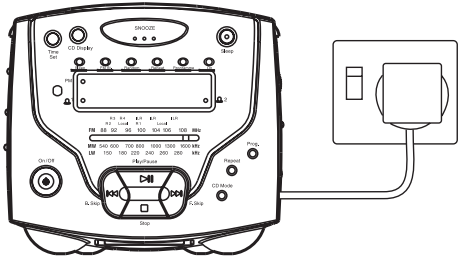

dvice, please call our Technical Helpline on :-

adio

clock radio by pressing the ***On/Off button***. The will light.

switch to the required waveband.

ed station by rotating the ***Tuning control***. The indicated in the dial scale.

ated on the rear of your CD clock radio is for ire should be fully extended and positioned for

ption there is a built in ferrite aerial. Rotate your e position giving best reception.

by rotating the ***Volume control***.

switch is set to FM and the station being tereo station the ***FM Stereo indicator*** will light.

witched off by pressing the ***On/Off button***. The switch off.

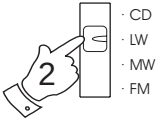

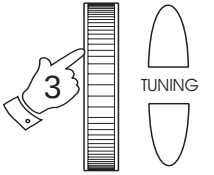



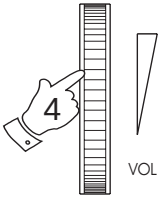



CDs which have the symbol.

ttach any sticker to the CD. Always hold the CD in its box after use with the label facing up.

breathe on the CD and wipe it with a soft, lint-ne from the centre towards the edge.

mage the CD

rain, moisture, sand, or to excessive heat. (e.g. or in motor cars parked in the sun).

n playback CD-DA format audio CD-R/CD-RW nalised* upon completion of recording.

fail to playback some CD-R/CD-RW discs due CD-R/CD-RW disc.

CD-R/CD-RW disc to playback on audio CD D clock radio.

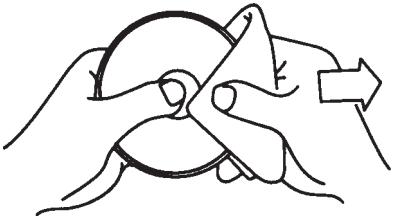

dvice, please call our Technical Helpline on :-

tton to switch on your CD clock radio. The ***On***

witch to CD.



mpartment, lift the ***CD door*** by the handle as

he spindle until it clicks into place. Close the ***CD***
r will scan the contents of the CD and the total
l appear on the display. After a short time the
showing time.

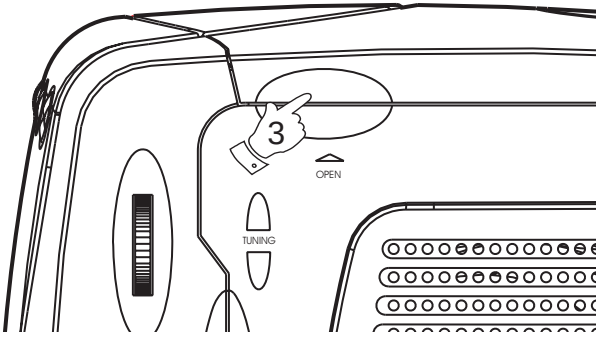

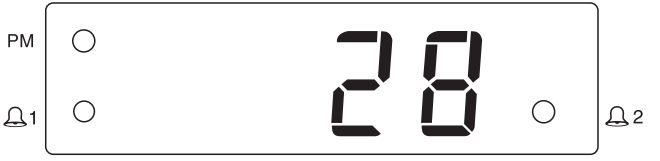

se button to start playback. The display will ber. After a short time the display will revert to

ntrol to the required setting.

rack number press the ***CD display button***.

k press the ***Play/Pause button***. The track he display. To resume playback press the ***Play/*** n.

ess the ***CD Stop button***. The display will revert

lift the ***CD door*** by the handle and remove the The ***CD doo***r should only be opened when the



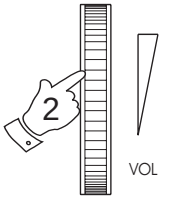



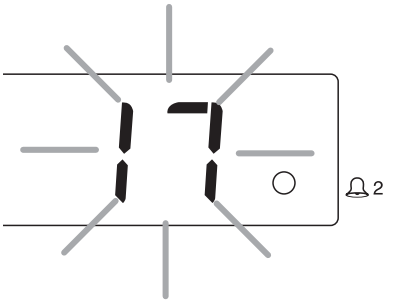



dvice, please call our Technical Helpline on :-

ying, press either the ***F.skip*** or ***B.skip buttons***
sired track, the track number will show in the
o skip tracks when the player is in stop mode.
track using the ***F.skip*** or ***B.skip buttons.***

se button to play the selected track. The track
n the display and after a short time the display
ng time.

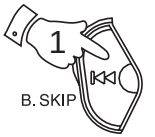



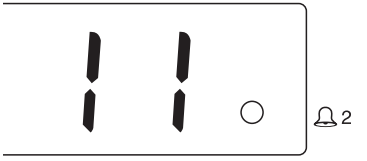

---

ying, press and hold down either the ***F.skip*** or

when the desired part of the track is reached.

aying press the ***Repeat button*** once to repeat
he ***Repeat indicator*** will flash.

tton again to repeat all tracks on the CD. The
will light up.

button again to return to normal play. The
will switch off.

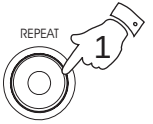

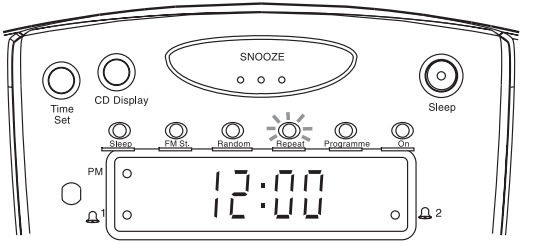

---

button to play all tracks on the CD in random
indicator will light up. The tracks are played
l all tracks have been played.

e button again to return to normal play. The
will switch off.

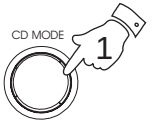

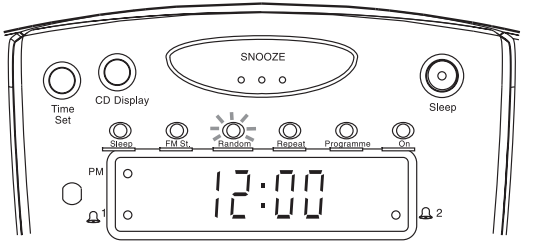

UCT means that the laser's construction makes
t the legally prescribed maximum permissible
ver be exceeded

quipment or devices other than those described
perating instructions, or tampering with the unit
n dangerous exposure to radiation.

dvice, please call our Technical Helpline on :-

yer you can play up to 20 tracks in any desired

Stop mode, press the ***Program button***. The
P 01' and the ***Program indicator*** will flash.

ill revert to showing time after 10 seconds of

using the ***F.skip*** or ***B.skip buttons***. The track
n the display. Store this track by pressing the

steps until you have completed your program
). Press the ***Play/Pause*** button to commence
tracks.

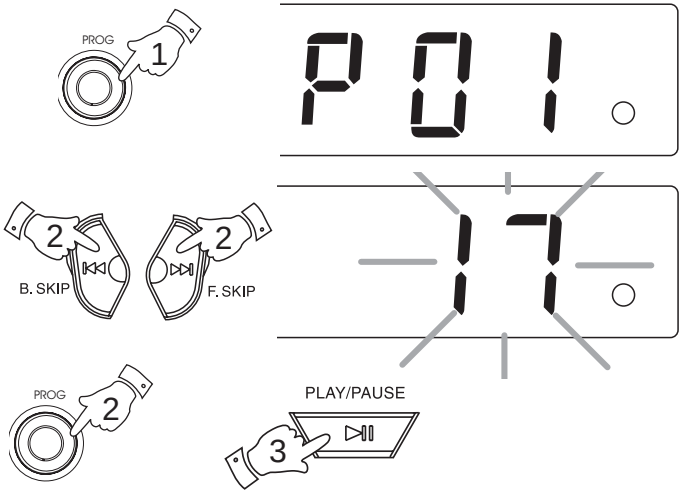

amme

Stop mode, repeatedly press the ***Program***
ugh the tracks programmed.

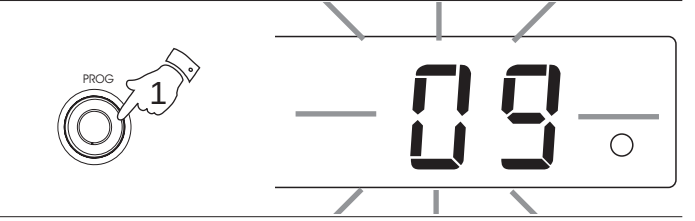

mme

Stop mode, press the ***Program button***. The
r will flash.

button to erase the programme. Programmes
pening the ***CD door***, changing position of the
nd interrupting the mains supply.

es

o wake you by a buzzer, CD or the radio. Your
eparate alarms which can be set to activate at

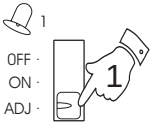

unction switch to the 'Adj' position.

tton to set minutes and the ***F.Skip button*** to
e the buttons when the correct time is reached.
hour display with a ***PM indicator***. Ensure that
cycle is selected.

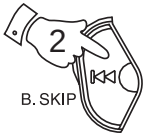

1 function switch to the 'Off' position. The
showing time and the ***Alarm 1 indicator*** will

ay will result if both the Alarm function switches
osition.

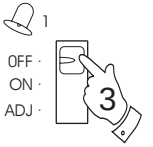

---

unction switch to the 'Adj' position.

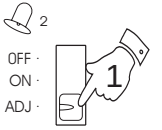

tton to set minutes and the ***F.Skip button*** to
e the buttons when the correct time is reached.
hour display with a ***PM indicator***. Ensure that
cycle is selected.

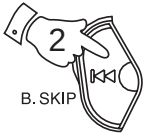

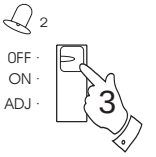

2 function switch to the 'Off' position. The
showing time and the ***Alarm 2 indicator*** will

dvice, please call our Technical Helpline on :-

m Times

ne, set the ***Alarm 1 function switch*** to the 'Adj' ne will flash in the display.

1 function switch to the 'Off' position. The showing time.

ne, set the ***Alarm 2 function switch*** to the 'Adj' ne will flash in the display.

2 function switch to the 'Off' position. The showing time.

ay will result if both the Alarm function switches position.

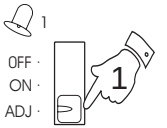

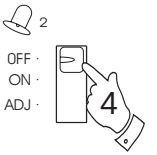

to wake to buzzer

as previously described. Set the ***Alarm mode*** ' position.

Alarm 2 function switch to the 'On' position. ***Alarm indicator*** will light.

tton to switch off your CD clock radio, the ***On*** ch off.

ill sound every day at the preset time for 90 ff the alarm until the next day press the ***On/Off***

arms permanently set the ***Alarm 1 or Alarm*** o the 'Off' position.

a low tone Alarm 2 has a high tone.

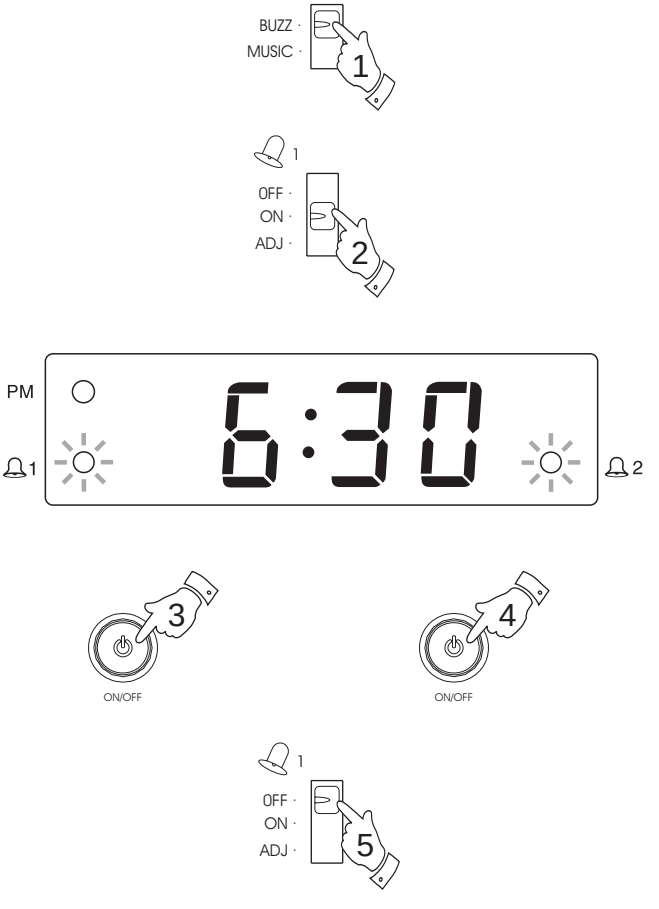

dvice, please call our Technical Helpline on :-

to wake to radio

as previously described. Set the ***Alarm Mode*** ' position.

Alarm 2 function switch to the 'On' position. ***Alarm indicator*** will light.

waveband using the ***Function switch*** and is tuned in

ntrol to the desired level.

utton to switch off your CD clock radio, the ***On*** ch off.

l sound every day at the preset time for 90 ff the alarm until the next day press the ***On/Off***

arms permanently set the ***Alarm 1 or Alarm*** o the 'Off' position.

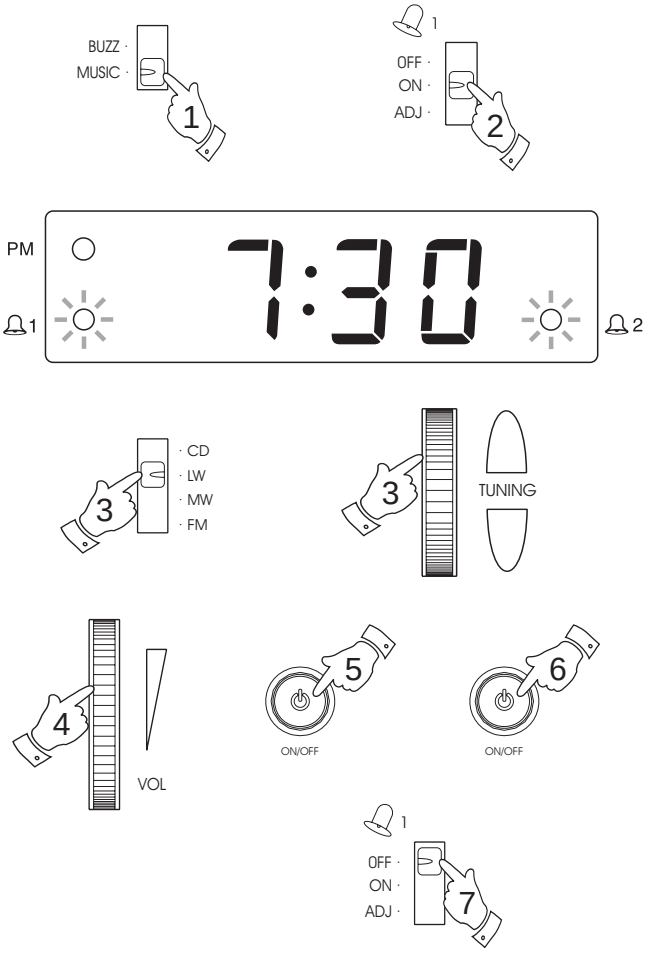

to wake to CD

as previously described. Set the ***Alarm Mode*** ' position.

Alarm 2 function switch to the 'On' position. ***Alarm indicator*** will light.

itch to the 'CD' position, insert a CD and ensure ***ntrol*** is set to the desired level.

utton to switch off your CD clock radio, the ***On*** ch off.

o switch off the unit will result in non operation me.

ery day at the preset time for a maximum of 90 ff the alarm until the next day press the ***On/Off***

arms permanently set the ***Alarm 1 or Alarm*** o the 'Off' position.

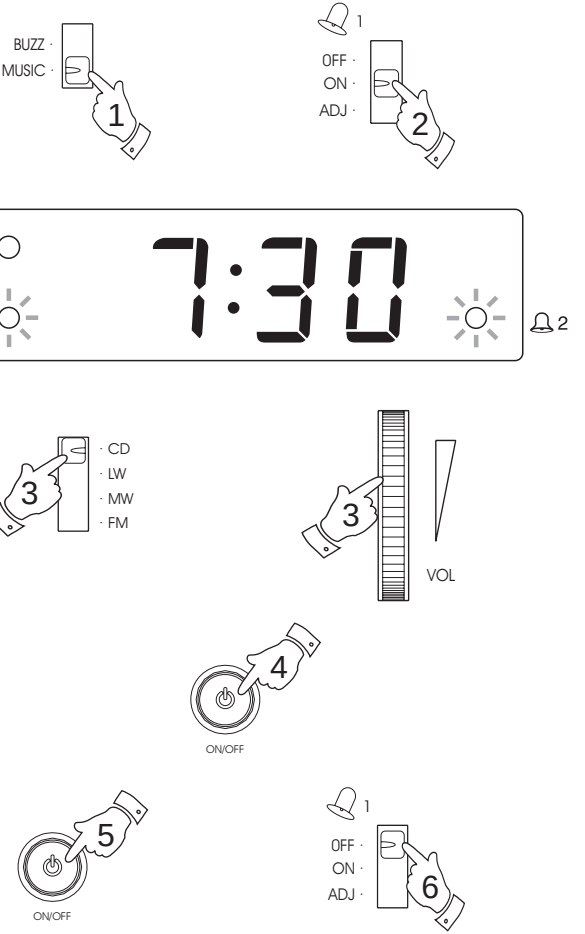

dvice, please call our Technical Helpline on :-

to wake to CD programme

ke to CD as previously described.

vourite tracks as described earlier.

se button followed by the ***CD Stop button.***

utton to switch off your CD clock radio, the ***On*** ch off.

o switch off the unit will result in non operation

n at the preset time and play tracks in the order





radio alarm can be silenced for 6 minutes by
button. This sequence can be repeated during
period.

---

k can be set to switch off automatically after a
osed.

nd release the ***Sleep button*** until the desired
aximum 90 minutes in 30 minute steps). The
light up and after a few seconds the radio if
lf CD has been selected press ***Play/Pause***
play for the selected sleep time.

l switch off after the sleep time has elapsed.

function before the preset time has expired,
utton.

sleep time, press the ***Sleep button*** once. The
ppear briefly in the display.

time after it has been set, press the ***Sleep***
ntil the desired time is displayed.

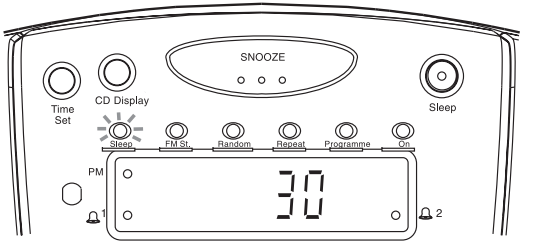

dvice, please call our Technical Helpline on :-

ocated on the left side of the LED Display will
the intensity of the clock display to suit room

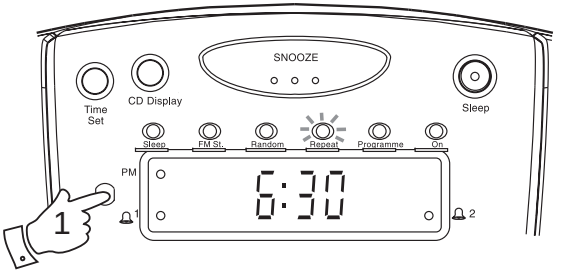

---

ket (3.5mm) located on left side of the unit is
h either headphones or an earpiece. Inserting
mutes the internal loudspeaker.

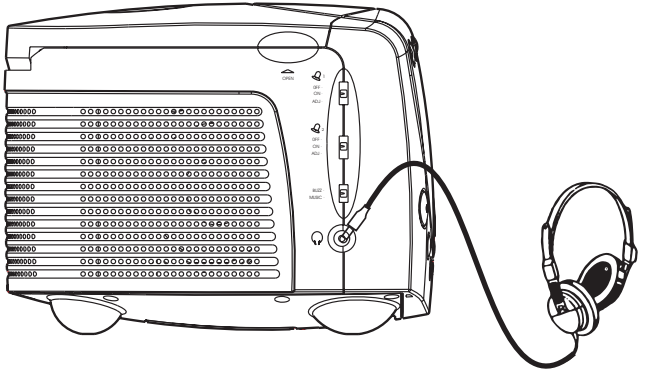

Circuit Features

s

AC 230 volts, 50Hz ∿ only

ery IEC size 6LR61 (6F22, PP3)

87.5 - 108MHz
515 - 1630kHz
142 - 292kHz

Loudspeaker 8 ohms

Output power 0.8 Watts

Aerial System FM String Wire Aerial

MW/LW Built-in Ferrite Bar aerial

CLASS 1
LASER PRODUCT

UCT means that the laser's construction makes it inherently safe so that the legally prescribed maximum permissible radiation cceeded

quipment or devices other than those described and specified in these operating instructions, or tampering with the unit n dangerous exposure to radiation.

cted to the mains even when it is switched off. The unit is only fully isolated from the mains if the mains plug is removed

The Company reserves the right to amend the specification without notice.

dvice, please call our Technical Helpline on :-

to be exposed to moisture (e.g. dripping or atures exceeding 70 degrees centigrade. It is FM band be used wherever possible as better y and freedom from interference will usually be W/LW bands.

from a supply of AC 230volts, 50Hz ∿ only.
is product is supplied with a plug which is fitted priate rating. If the plug supplied is not suitable should be removed by unscrewing the plug top, removing the cable.
to suit your household together with a correctly ted.
CONSULT A QUALIFIED ELECTRICIAN
make any connection to the larger terminal which E or by the safety earth symbol ⏚ or coloured ellow.
s lead are coloured in accordance with the

UTRAL BROWN - LIVE
not correspond with the coloured markings in your plug, proceed as follows:-



The wire coloured BLUE must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN must be connected to the terminal marked L or coloured RED.

Mains Lead

Fuse

This apparatus must be protected by a 3A fuse (BS1362) in a 13A plug (BS1363). If another type of plug is used a 5A fuse should be fitted in the plug, adaptor or distribution board.

IF IN DOUBT - CONSULT A QUALIFIED ELECTRICIAN.

Back-up Battery (not necessary for the unit to function)

Slide the battery cover catch in the direction of the arrow. Open the battery cover. Fit a 9 volt IEC size 6LR61 (6F22, PP3) or equivalent battery into the compartment. Observe the correct polarity as shown inside the battery compartment. Replace the battery cover.

The time and alarm settings will be retained during a temporary failure of the AC mains supply. The LED display will not be operational. The display will be extinguished to conserve battery life, but the memory will retain details of the time and alarm time settings.

If your clock radio is not to be used for a prolonged period of time, remove the battery to avoid damage by battery leakage.

The Nameplate is located on the underside of your CD clock radio.

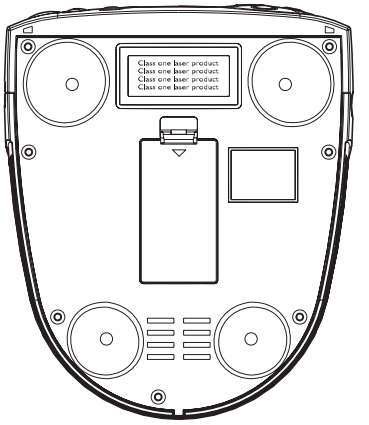

Guarantee

nteed for twelve months from the date of delivery to the original owner against failure due to faulty workmanship or component
ne procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced

t cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Receivers with removed or defaced serial numbers.

arantee should be made through the dealer from whom the instrument was purchased. It is likely that your Roberts' dealer
any defect quickly and efficiently, but should it be necessary the dealer will return the instrument to the company's service
. In the event that it is not possible to return the instrument to the Roberts' dealer from whom it was purchased, please
Technical Services department at the address shown on the rear of this manual before taking further action.

These statements do not affect the statutory rights of a consumer.

dvice, please call our Technical Helpline on :-

ROBERTS RADIO TECHNICAL SERVICES

97-99 Worton Road

Isleworth Middlesex

TW7 6EG

Technical Helpline:- 020 8758 0338 *(Mon-Fri)*